

VIP SET-UP KEYPAD

Ref. Nr. 10.0021

- 3 *The SET-UP KEYPAD is designed to initialize VIP boards. It must be linked with the RS232C input connector to load the system commands into the VIP board memory.*
- 3 *To initialize the VIP boards, the video out of the board is connected to the video in of the monitor. The keypad is connected to the service port of the VIP board.*



Specifications

Dimensions

- Width 75 mm
- Depth 26 mm
- Height 130 mm

Weight


- 0.37 Kg

Data format

- Serial data format RS232C
- Auto repeat 20 Hz after 0.5s delay

Power Supply

- Takes 3.3 - 5VDC from serial connector - 5mA (max)

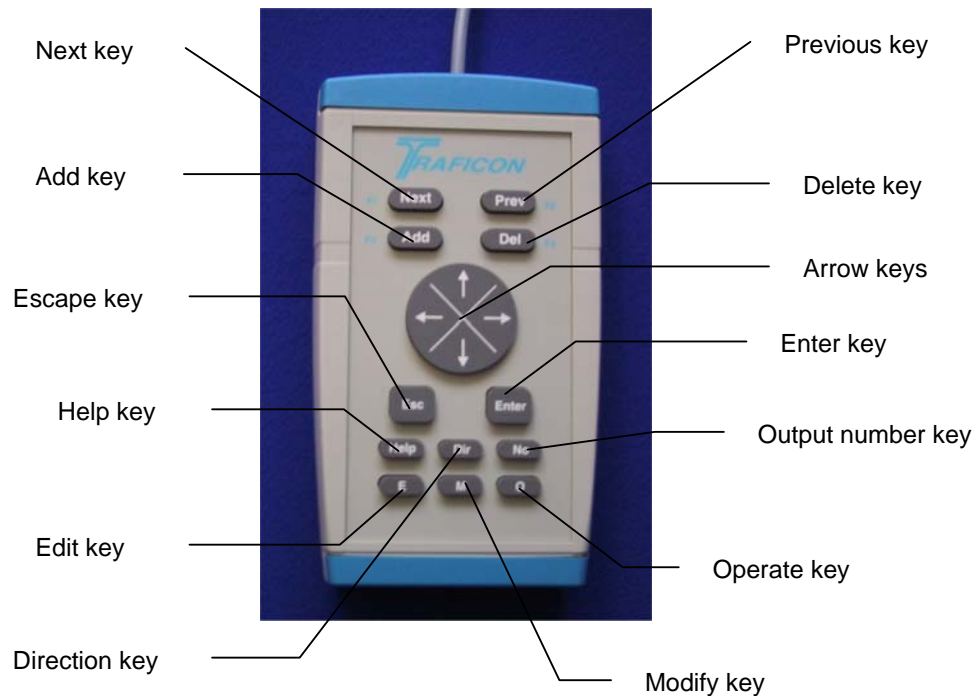

Functions

Arrow keys

- To scroll through a menu.
- To scroll through the values of a parameter.
- To select a submenu.

Enter key

- To enter a menu, a submenu or an item within a submenu.
- To edit a value for a parameter and confirm.

Escape key

- To exit the menu or submenu.

Next key

- To proceed to the next detection line or zone.

Previous key

- To move to the previous detection zone or line.

Add key

- To add a detection zone or line.

Del key

- To delete a detection zone or line.

Direction key

- To make a zone direction sensitive.

Help key

- To display help text for an item.

Output number key

- To assign an output number to a detection zone.

Operate key

- To put the board in operation mode.

Modify key

- To change settings while starting from the last saved settings for all parameters.

Edit key

- To change settings while starting from default values for all parameters.